

V7 Nav720

Firmware Update Instruction

Last Updated 9/5/2008

If you are attempting to update the firmware, then it is assumed that you have basic knowledge of copying and pasting in Windows OS, browsing and downloading files from internet, formatting drives and unzipping archived folders.

V7 is not responsible for any software corruption or loss of data. You are responsible to make sure the software and personal data is backed up appropriately.

UPDATE PROCEDURE

Before You Start

Step 1: Connect all devices

- Insert SD card to SD card reader / writer
- **NOTE:** *It is recommended to use a standard SD / MMC cards with 1GB or less space.*
- Note the drive letter for SD card (example **SD:**)

Step 2: Download needed files

- If you require firmware update, download Firmware_Update.zip to PC

Prepare SD Card

Step 1: Format SD Card

- *Right-click* on **SD:** in My Computer, *select* **Format**, select **FAT** as file system and click **OK**

Step 2: Copy Firmware Update files into SD Card

- *Unzip* (extract) **Firmware_Update.zip** and copy contents into **SD:**
- **NOTE:** *SD card should only contain Firmware update file (with .nb0 extension)*

Apply Update

Step 1: Turn battery on/off switch on the right-side of the GPS unit to “**on**”

Step 2: Power down the GPS unit by pressing “**V7**” button

Step 3: Insert the SD card into the GPS unit

Step 4: Using a pointed tool, press the “**Reset**” switch on the backside of unit and hold it

Step 5: Power on the GPS unit by pressing “**V7**” button

Step 6: When screen turns green, then release the “**Reset**” switch. The screen will turn blue for a moment.

NOTE: *if screen turned Red then the SD card is incompatible and operation is halted; simply take out the SD card and press reset and the unit will restart. Try using another SD card.*

Step 7: Wait until the unit restarts and shows the main launcher; and you are done ☺